


Article number: 50.SET.4040.1



Starter kit - 400 x 400 mm

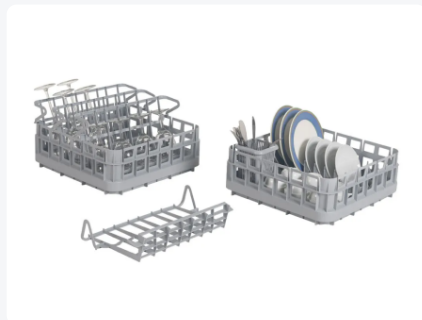

Product specifications

| | |
|----------------------------------|---|
| External dimensions (L x W x H) | 400 x 400 x 145 mm |
| Handles | Open |
| Sidewalls | Open, for optimal rinsing results and a faster drying process |
| Material | PP |
| Article number | 50.SET.4040.1 |
| Temperature range | -30°C to +80°C |
| Color | Grey |
| Bottom | Coarse mesh |
| European Article Number | 7424918938904 |

Properties

The 50.SET.4040 Starter kit comprises two 50.R.390 bistro baskets, one plastic insert rack for 9 plates 50.PI.400, one cutlery drainer 50.CBS.0 and four 50.GR.400 glass insert racks

Description

The Starterskit 400 x 400 mm is an essential package designed to equip dishwashers measuring 400 x 400 mm for efficiently washing glassware, dishes, and cutlery. This comprehensive kit includes two bistro baskets (400 x 400 x H 145 mm), providing ample space for accommodating various items. Additionally, it features one plate insert rack 50.PI.400, ideal for securely holding plates during the washing cycle.

Moreover, the kit includes one cutlery cup 50.CBS.0, ensuring that cutlery items are organized and kept separate for thorough cleaning. To further optimize the washing process, four glass insert racks 50.GR.400 are included, allowing glasses to be securely positioned for effective washing without the risk of damage.

Overall, the Starterskit 400 x 400 mm offers a convenient and complete solution for establishments requiring a basic setup for their 400 x 400 mm dishwashers. Whether used in restaurants, cafes, or other food service establishments, this kit provides the necessary tools for achieving sparkling clean glassware, dishes, and cutlery, ensuring a hygienic and efficient washing process.



Matching accessories



Alternative articles

